



RST



Owner's Manual

ENGLISH

SmartTAG
P L A T F O R M

Please clean the inside of the steer tube thoroughly from grease or dirt and dust residue. Do not grease the inside of the steerer as it could lead to the Smart Tag PF not finding optimal grip to stay put.

Installation Instructions :

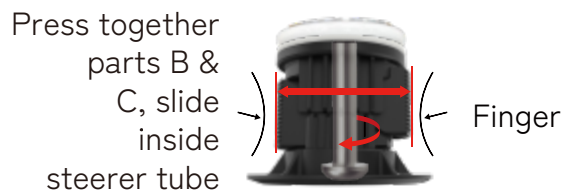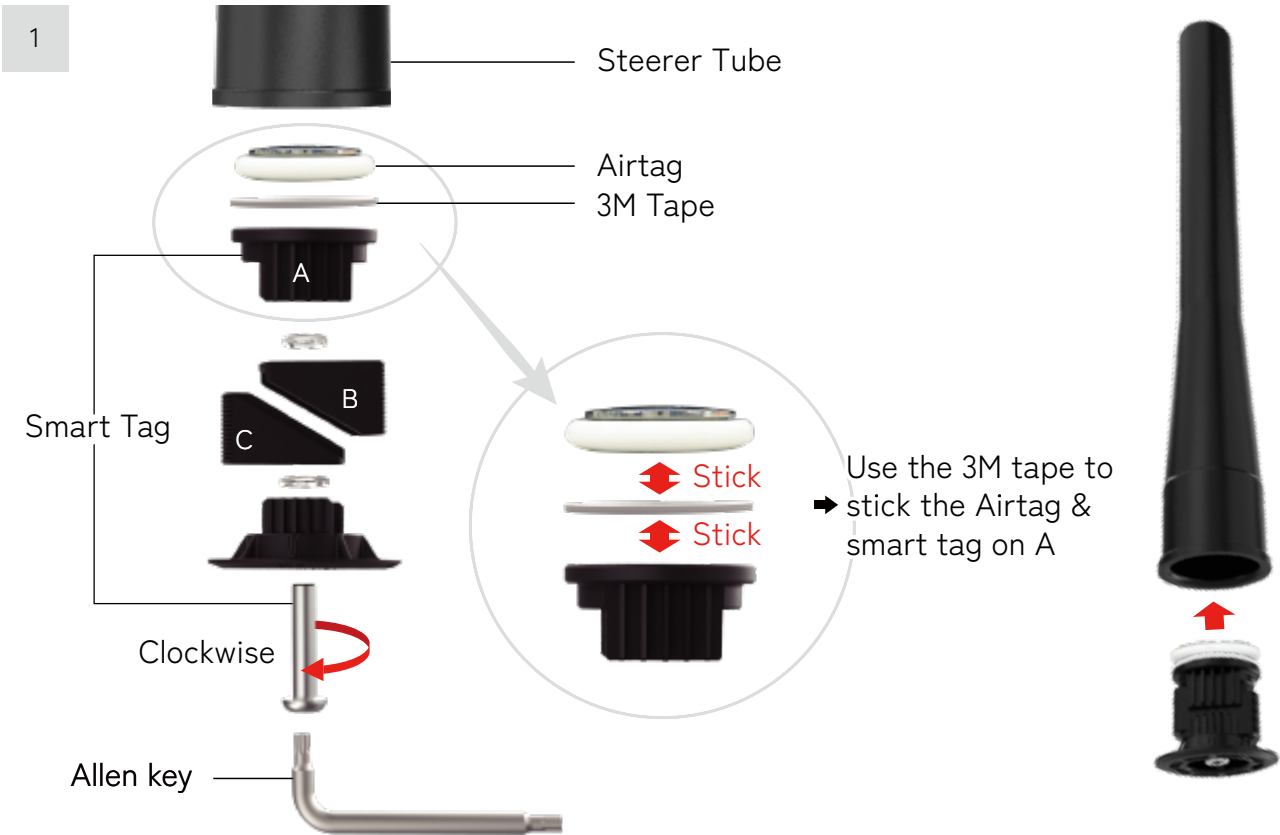

- 2 Rotate screw to set parts B & C smaller than inside diameter of steerer tube.
- **Do not unscrew more than 2 turns to avoid losing parts.**



- 3 Install into the tube and tighten to 1.5 N-m.
- **Do not over tighten.**



- 4 Installation complete

Specification





RST GREENERGY TECH.CO.,LTD.
www.rstsuspension.com



TAIWAN
HEAD QUARTER

RST GREENERGY TECH. CO., LTD.

TEL : +886.2.85212351

Email : rst@rst.com.tw

NO. 9, LANE 371, HUA CHENG RD., XIN ZHUANG DIST, NEW TAIPEI CITY 24253, TAIWAN

EUROPE

RST EUROPE OFFICE

TEL : +49.711.2588255

Email : info@rst-europe.eu

HOFENER STRASSE 114, D-70372 STUTTGART, GERMANY

CHINA

SUZHOUN DAWEI PRECISION CO., LTD.

TEL : +86.512.86160698

Email : sales2@rst-topway.cn

ECONOMIC DEVELOPMENT ZONE, KUNSHAN CITY, JIANGSU PROVINCE, WUSONGJIANG ROAD 2 NO. 2